
TABLE OF CONTENTS

GENERAL	2
PREPARATION	3
Project Definition	3
Pre-installation visit & checklist	4
Network	5
Cabling Diagram	7
INSTALLATION	9
Cabling	10
Pass Gateway rack Placement	11
displays Placement	12
camera Placement	14
CONNECTING	17
Connecting Rack	17
Connection to legacy PMS & barriers	18
Connection Barriers	19
Loops	20
POWER-UP & CONFIGURATION	21
Acceptance Installation	21
Acceptance Cabling & External Connections	22
Rack	23
I/O Module	24
Network Access	27
PC	28
Network Switch	29
UPS	32
Keypad	35
Camera's Survision	36
Displays	38
ERROR SCENARIO'S	45

Battery Amber On when the load is supplied by the battery

is displayed on several screens, pressing the button can scroll up.

Fault Red On when an error has occurred within the UPS

Down

Programmable Outlet1 Green On when programmable Outlet1 is On

Pressing this button can move the cursor down or decrease the value displayed in the input data field. When a menu is displayed on several screens, pressing the button can scroll down.

Programmable Outlet2 Green On when programmable Outlet2 is On

ECO Mode Green On when the UPS is in ECO Mode

Enter Pressing this button can enter the next level menu or confirm the parameter setting value.

Control Buttons

Operations & Display Panel

ESC Pressing this button returns to the previous menu or aborts any change in the input data field before confirming.

LED Indicators

Control Buttons

Up

Up

Pressing this button can move the cursor up or increase the value displayed in the input data field. When a menu

Down

Menu Structure

