


TABLE OF CONTENTS

GENERAL	2
PREPARATION	3
Project Definition	3
Pre-installation visit & checklist	4
Network	5
Cabling Diagram	7
INSTALLATION	9
Cabling	10
Pass Gateway rack Placement	11
displays Placement	12
camera Placement	14
CONNECTING	17
Connecting Rack	17
Connection to legacy PMS & barriers	18
Connection Barriers	19
Loops	20
POWER-UP & CONFIGURATION	21
Acceptance Installation	21
Acceptance Cabling & External Connections	22
Rack	23
I/O Module	24
Network Access	27
PC	28
Network Switch	29
UPS	32
Keypad	35
Camera's Survision	36
Displays	38
ERROR SCENARIO'S	45

DISPLAYS

Philips Signage display 42BDL5057P

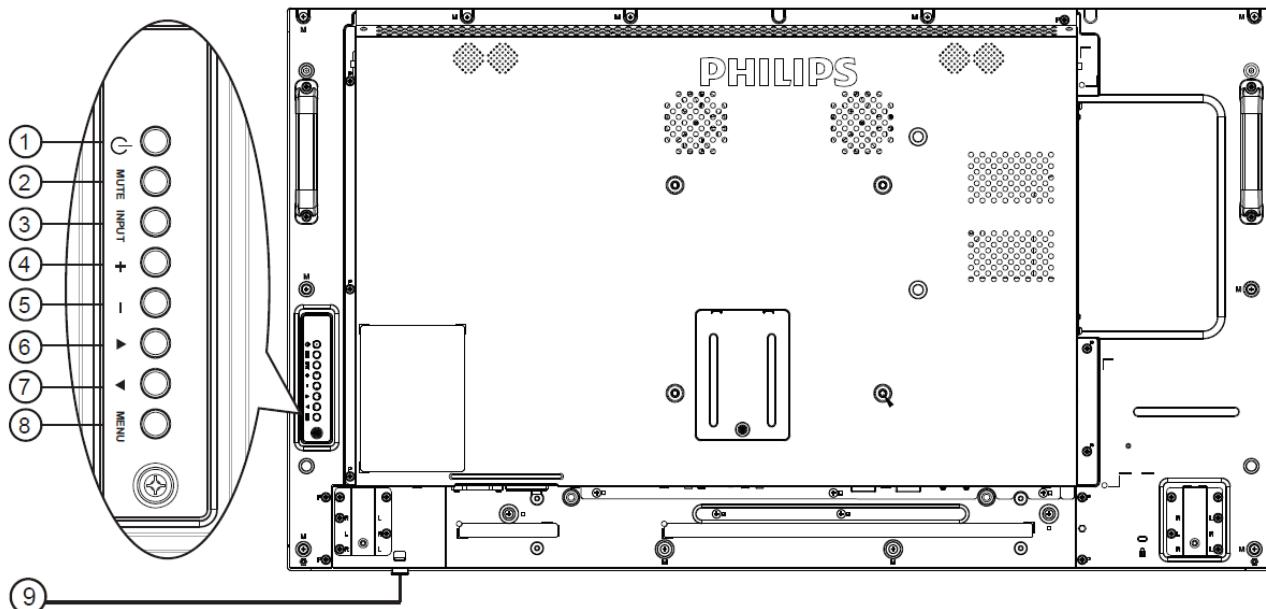

1 [] button

Use this button to turn the display on or put the display to standby.

Move the highlight bar up to adjust the selected item while OSD menu is on.

2 [MUTE] button

Switch the audio mute ON/OFF.

7 [] button

Move the highlight bar down to adjust the selected item while OSD menu is on.

3 [INPUT] button

Choose the input source.

8 [MENU] button

Return to previous menu while OSD menu is on, or to activate the OSD menu when OSD menu is off.

4 [] button

Increase the adjustment while OSD menu is on, or increase the audio output level while OSD menu is off.

9 Remote control sensor and power status indicator

Receives command signals from the remote control

5 [] button


Decrease the adjustment while OSD menu is on, or decrease the audio output level while OSD menu is off.

Indicates the operating status of the display without OPS: Lights green when the display is turned on Lights red when the display is in standby mode Lights amber when the display enters APM mode When {SCHEDULE} is enabled, the light blinks green and red If the light blinks red, it indicates that a failure has been detected

6 [] button

Lights off when the main power of the display is turned off

Input/Output Terminals

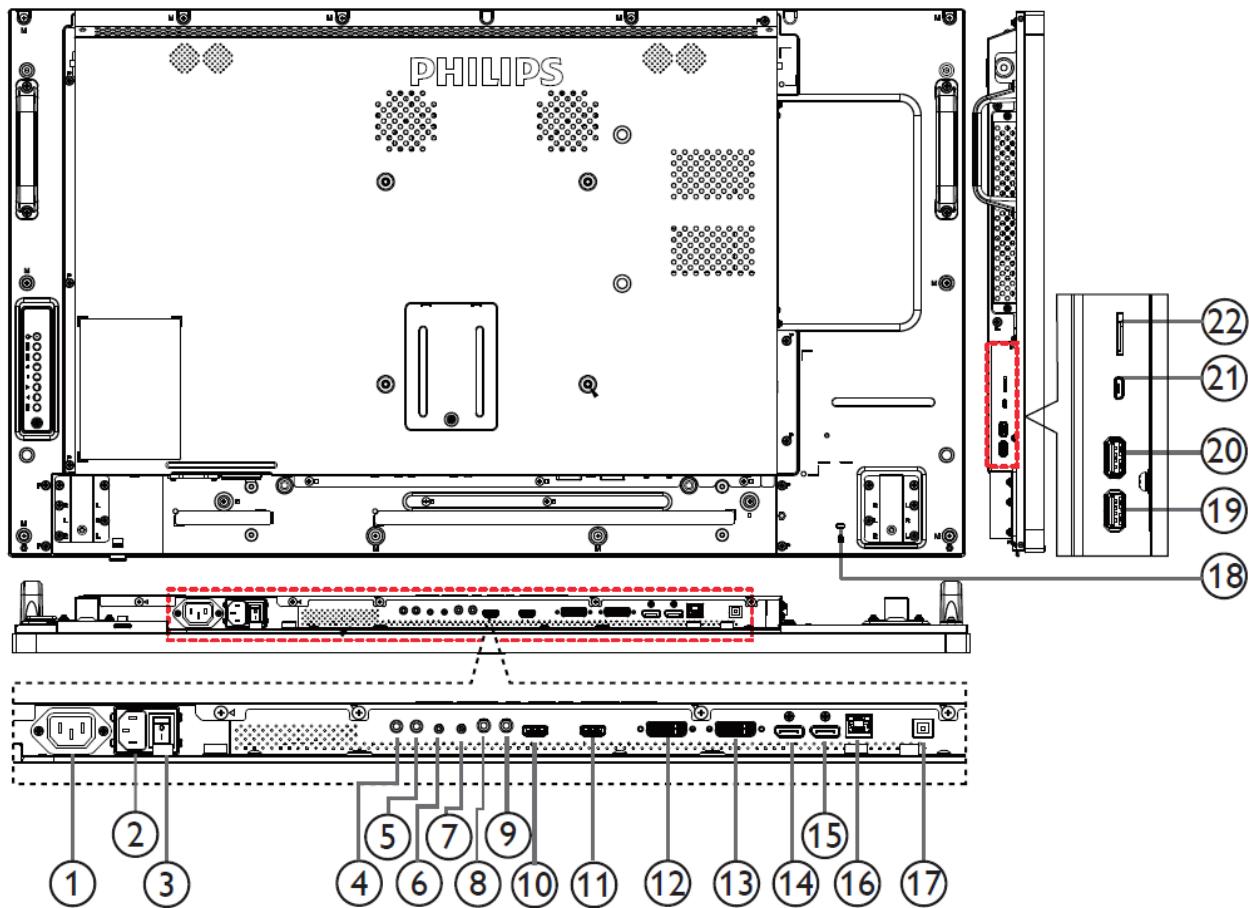

AC OUT

9 AUDIO OUT

2 AC IN

10 HDMI1 IN / 11 HDMI2 IN

AC power input from the wall outlet.

12 DVI-I IN

3 MAIN POWER SWITCH

13 DVI OUT / VGA OUT

Switch the main power on/off.

14 DisplayPort IN / 15 DisplayPort OUT

4 IR IN / 5 IR OUT

16 RJ-45

6 RS232C IN / 7 RS232C OUT.

LAN control function for the use of remote control signal from control center.

8 LINE IN

17 USB PORT

Connect your USB storage device.

2 [PLAY] buttons

Control playback of media files.(for Media Input only)

18 SECURITY LOCK

Used for security and theft prevention.

Freeze feature

19 USB PORT B

Connect your USB storage device.

Pause: Freeze hot key for all inputs content.

20 USB PORT A


Play: Unfreeze hot key for all input content.

21 MICRO USB

Root Menu: Go to Video source OSD.

22 MICRO SD CARD

Root Menu: Go to Main Menu OSD.

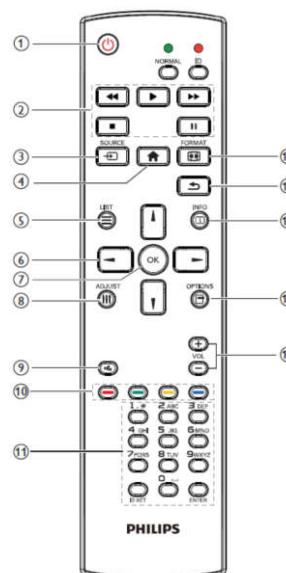Remote Control**1 [] POWER button**

Power ON/OFF.

5 [] LIST button

No function.

6 NAVIGATION buttons

[]

Root Menu: Go to Smart picture OSD.

Main Menu: Move the highlight bar up to adjust the selected item.

IR Daisy Chain Menu: Increase controlled Group ID number.

[]

Root Menu: Go to Audio source OSD.

Main Menu: Move the highlight bar down to adjust the selected item.

IR Daisy Chain Menu: Decrease controlled Group ID number. Press to set the display ID..

12 [] FORMAT button

Main Menu: go to previous level menu.

Source Menu: Exit source menu.

Volume Menu: Decrease Audio Volume.

13 [] BACK button

Main Menu: go to next level menu or set selected option.

Source Menu: Go to selected source.

Volume Menu: Increase Audio Volume.

14 [] INFO button

Root Menu: Go to IR daisy chain OSD in Primary/Secondary mode.

Main Menu: Confirm an entry or selection.

15 [] OPTIONS button

Go to Auto Adjust OSD for VGA only.

16 [] [] VOLUME button

Toggle Audio Mute/Unmute.

17 [] [] [] COLOR buttons

Choose tasks or options.(for Media Input only)

[] Hot key for Window selection function.

18 [Number/ ID SET/ ENTER] button

Enter text for network setting.

Connecting

- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Remove any object that could fall into the vents or prevent proper cooling of the display's electronics.
- Do not block the ventilation holes on the cabinet.
- Keep the display dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- When turning off the display by detaching the power cable or DC power cord, wait for 6 seconds before re-attaching the power cable or DC power cord for normal operation.

- To avoid the risk of shock or permanent damage to the set do not expose the display to rain or excessive moisture.
 - When positioning the display, make sure the power plug and outlet are easily accessible.
 - **IMPORTANT:** Always activate a screen saver program during your application. If a still image in high contrast remains on the screen for an extended period of time, it may leave an 'after-image' or 'ghost image' on the front of the screen. This is a well-known phenomenon that is caused by the shortcomings inherent in LCD technology. In most cases the afterimage will disappear gradually over a period of time after the power has been switched off. Be aware that the after-image symptom cannot be repaired and is not covered under warranty.
- (2) Proxy
 - (3) Data usage (Show up when 4G module connected)
 - (4) More (Show up when 4G module connected)
 - (5) Signage Display
 - (6) System Tools
 - (7) Display
 - (8) Storage
 - (9) Apps
 - (10) Security (Show up when 4G module connected)
 - (11) Date & time
 - (12) Developer options
 - (13) About

Configuring

Setting

Main items:

(1) Ethernet

