

TABLE OF CONTENTS

GENERAL	2
PREPARATION	3
Project Definition	3
Pre-installation visit & checklist	4
Network	5
Cabling Diagram	7
INSTALLATION	9
Cabling	10
Pass Gateway rack Placement	11
displays Placement	12
camera Placement	14
CONNECTING	17
Connecting Rack	17
Connection to legacy PMS & barriers	18
Connection Barriers	19
Loops	20
POWER-UP & CONFIGURATION	21
Acceptance Installation	21
Acceptance Cabling & External Connections	22
Rack	23
I/O Module	24
Network Access	27
PC	28
Network Switch	29
UPS	32
Keypad	35
Camera's Survision	36
Displays	38
ERROR SCENARIO'S	45

DISPLAYS PLACEMENT

Mounting on a pole

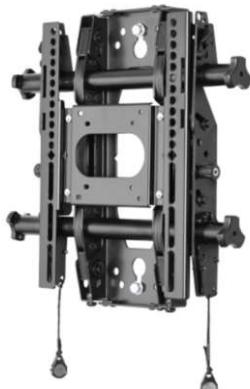

More info:

<https://www.milestone.com/Products/Chief/Mounts/Display/Wall-Tilting/Fusion%20Wall-Tilt/STMS1U>

Precondition:

Foresee a CAT6 ethernet cable and a mains power connection.

Display 42BDL5057P Specifications:

Power input: 100 - 240V~, 50 - 60Hz, 5.5A max 215W typ 85W


Weight: 15.5W

Dimensions: 950 x 541 x 71 mm




figure 1 Display mount
De Colonel

These display holders have the possibility to protect the display against theft by a padlock through the mount.

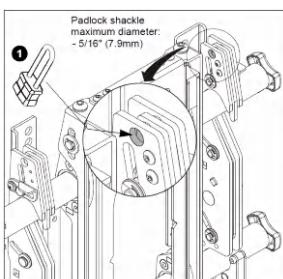


Mounting on a Wall

To mount this display to a wall, you will have to obtain a standard wall-mounting kit

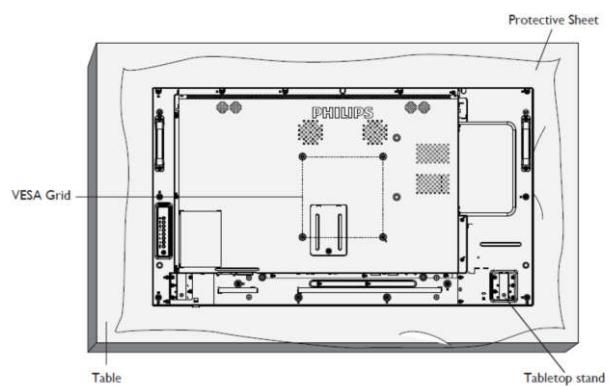

Mounting in Portrait Position

This display can be installed in portrait position.

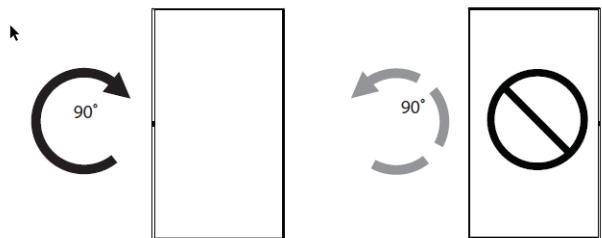

1. Remove the table stand, if attached.
2. Rotate 90 degrees clockwise. The " " logo should be on the LEFT side when facing the display.