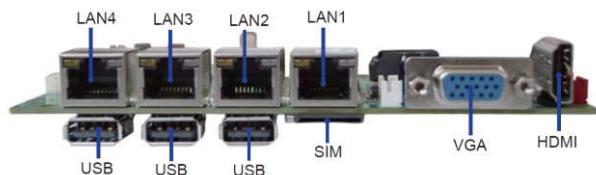

TABLE OF CONTENTS

GENERAL	2
PREPARATION	3
Project Definition	3
Pre-installation visit & checklist	4
Network	5
Cabling Diagram	7
INSTALLATION	9
Cabling	10
Pass Gateway rack Placement	11
displays Placement	12
camera Placement	14
CONNECTING	17
Connecting Rack	17
Connection to legacy PMS & barriers	18
Connection Barriers	19
Loops	20
POWER-UP & CONFIGURATION	21
Acceptance Installation	21
Acceptance Cabling & External Connections	22
Rack	23
I/O Module	24
Network Access	27
PC	28
Network Switch	29
UPS	32
Keypad	35
Camera's Survision	36
Displays	38
ERROR SCENARIO'S	45

PC



• RJ45 LAN Connector--- LED define Giga/100MB Connector

Indicate	Side	10 Mbps		100 Mbps		1000 Mbps		
		Back	Front	Back	Front	Back	Link	ACT
LAN Light		Orange	Orange	Green	Orange	Orange	Red	Orange

If a new factory reset PC is used:

Enter Setup

Power on the computer and press **** key immediately to enter Setup.

If the message disappears before you respond but you still wish to enter Setup,

restart the system by turning it OFF then ON or pressing the "RESET" button on the

system case. You may also restart the system by simultaneously pressing **<Ctrl>**,

<Alt> and **<Delete>** keys.

Plug in ID key

Plug in USB key with start image

Reboot

| The rest of the procedure

Install new resin image (dhcp or static IP?)

In a resin application, click the green "add device" button.

Click on "download ResinOS"

Extract the zip.

Flash the image on the usb drive using Etcher.

Plug in the power cable and ethernet cable in port LAN1.

Boot the device without the USB stick and go into the BIOS by holding Delete/Del.

Change the following boot settings:

These should only be temporary steps since the hardware supplier will do these later on.

SATA Controller => enabled

Chipset SATA Mode : AHCI (not IDE)

SATA Speed : Gen 2

Dual Boot Type

Quiet boot disabled

EFI Legacy device order : legacy first

Plug the USB stick in, the device will boot into resin and it will reboot, the device will appear in resin under the application.

Once you see the device in resin.io, wait till the device is completely shutdown, unplug the USB stick and boot.

Remark: Is static IP configuration defined in configuration file on the USB stick?