
TABLE OF CONTENTS

GENERAL	2
PREPARATION	3
Project Definition	3
Pre-installation visit & checklist	4
Network	5
Cabling Diagram	7
INSTALLATION	9
Cabling	10
Pass Gateway rack Placement	11
displays Placement	12
camera Placement	14
CONNECTING	17
Connecting Rack	17
Connection to legacy PMS & barriers	18
Connection Barriers	19
Loops	20
POWER-UP & CONFIGURATION	21
Acceptance Installation	21
Acceptance Cabling & External Connections	22
Rack	23
I/O Module	24
Network Access	27
PC	28
Network Switch	29
UPS	32
Keypad	35
Camera's Survision	36
Displays	38
ERROR SCENARIO'S	45

CONNECTION BARRIERS

WPS

Connect the relay NO output of the IO module to the "External Open" connection of the WPS access terminal. Same as the Command module (same as the open function via the QCR)

There is a contact available CLOSED. Now it is a opto input to the + 24V and a switch in the barrier.

If we need to read it in our IO module it should be connected to a opto connected to +24V and not to GND.