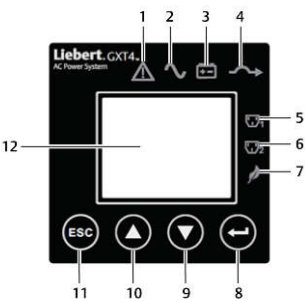# TABLE OF CONTENTS

UPS

GXT4 VERTIV 700VA Libert

Operation

The operation and display panel on the front of the GXT4 has control buttons, LED indicators and a

liquid-crystal display (LCD).

1 Fault indicator	7 ECO mode indicator
2 Inverter indicator	8 Enter button
3 Battery indicator	9 Down button
4 Bypass indicator	10 Up button
5 Programmable-outlet 1 indicator	11 Escape button
6 Programmable-outlet 2 indicator	12 LCD panel

LED Indicators

The LED indicators on the front of the operation and display panel are:

• Inverter

• Battery

• Bypass

• Programmable Outlet1

• Programmable Outlet2

• ECO Mode

• Fault

Inverter Green On when the inverter is supplying power

Bypass Amber On when the load is supplied by the mains through automatic/manual bypass

Battery Amber On when the load is supplied by the battery

Fault Red On when an error has occurred within the UPS

Programmable Outlet1 Green On when programmable Outlet1 is On

Programmable Outlet2 Green On when programmable Outlet2 is On

ECO Mode Green On when the UPS is in ECO Mode

Control Buttons

ESC Pressing this button returns to the previous menu or aborts any change in the input data field before confirming.

Up

Pressing this button can move the cursor up or increase the value displayed in the input data field. When a menu is displayed on several screens, pressing the button can scroll up.

Down

Pressing this button can move the cursor down or decrease the value displayed in the input data field. When a menu is displayed on several screens, pressing the button can scroll down.

Enter Pressing this button can enter the next level menu or confirm the parameter setting value.

Operations & Display Panel

LED Indicators

Control Buttons

Up

Down

Menu Structure